


# CLEARLY BETTER SENSITIVITY

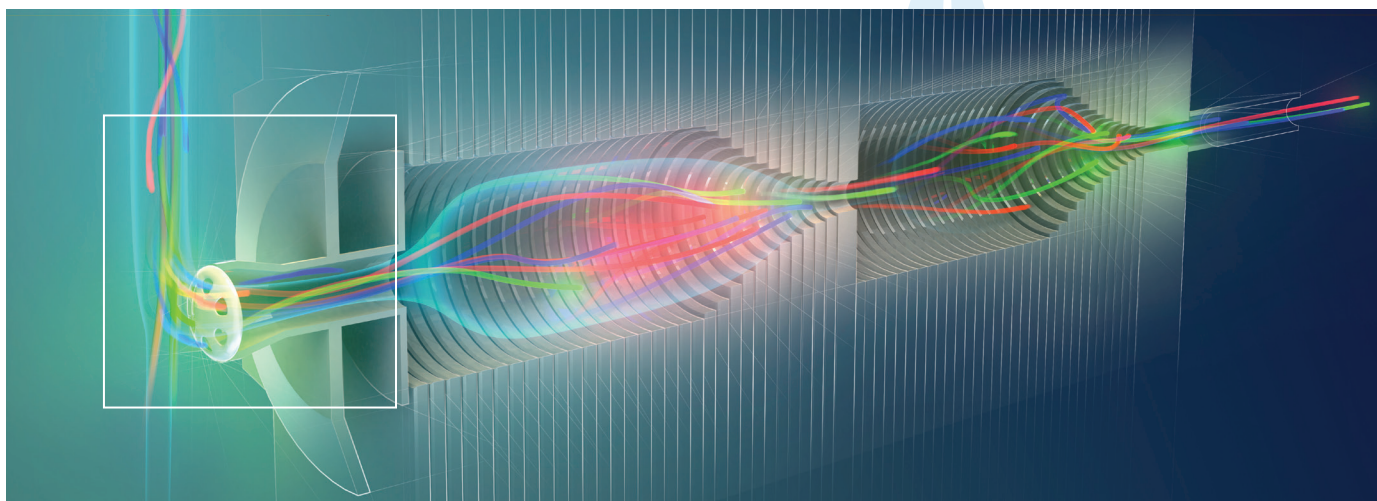

## Revolutionary iFunnel technology

**Lowest limits of LC/MS detection. Highest levels of sensitivity.**

Now standard on the Agilent 6550 iFunnel Q-TOF and 6490 Triple Quadrupole systems

- Ultra trace level quantitation
- Unmatched high sensitivity Qual/Quan
- More confident compound identification using high resolution accurate mass measurements

**Learn why iFunnel technology is Clearly Better than anything else available today.**

Visit [www.agilent.com/chem/cbifunnel](http://www.agilent.com/chem/cbifunnel)



© Agilent Technologies, Inc. 2011

The Measure of Confidence



Agilent Technologies